

# FH-01 Quick Start Programming Guide

The FH-01 thermostat is made with default factory settings which will function very well out of the box, but might not suit your lifestyle. This is a quick-start guide to altering the factory settings to suit your individual needs. All of the features of the FH-01 are explained in greater detail in the main operating instructions.

## Setting The Clock

- With the thermostat turned on, press the Clock button twice
- You are now able to set the minutes using the Up/Down keys
- Press H to accept
- You are now able to set the hours using the Up/Down keys
- Press H to accept
- You are now able to set the day of the week using the Up/Down keys
- Press A to store and exit

## Temperature Hold/Manual Override

The temperature hold function allows you to manually override the programme and set a temperature for a desired period.

- Press H
- Using the Up/Down arrow keys enter the required hold time
- Press H
- Using the Up/Down arrow keys enter the required hold temperature
- Press A to accept

You will see the Hold indication is displayed which will countdown the hold duration.

To cancel, reduce the Hold time to 00 hours

## Altering the default program

The thermostat is supplied with a default program, but these can be changed easily. The default times are;

- 08.00 - 21°C (Wake)
- 09.30 - 16°C (Leave)
- 16.30 - 22°C (Return)
- 23.00 - 17°C (Sleep)

You can adjust the time and temperature for each of the 4 operations above.

- To begin programming, press Clock Once
- You will see Mon-Fri shown, the thermostat is setup for Weekday/Weekend Programming by default. If you want to change to 7-day programming see the optional features section of the main instructions.
- Using the Up/Down arrow keys, enter the required Wake time
- Press H
- Using the Up/Down arrow keys, enter the required Wake Temperature
- Press H
- You will now see "Leave"
- You should repeat the programming for each period, entering --.-- for unused periods.

Note: For weekday/weekend Programming, the 4 comfort levels are the same for all weekdays. For 7 day programming each day can have 4 different comfort levels.

## Wiring

For wiring instructions please see the diagram towards the back of the main instruction booklet.

